

These instructions are for converting a standard hard side waterbed pedestal. If you have a non-standard frame you may need to make modifications to these instructions. Complete these steps before beginning the assembly of the mattress.


Before Draining Your Waterbed

It is very important to check the contents of your mattress boxes against the list on page 9 of the assembly instructions. If you are missing any items, please e-mail Customer Service at customerservice@selectcomfort.com or call 1-800-472-7185.

Assembly of this mattress in your existing waterbed frame requires the use of a small saw and an electric drill. Be sure you have these tools available before you begin. Follow the steps below to prepare your waterbed pedestal.


1 Prepare Pedestal Base

- After you have checked to make sure you have all the components, drain waterbed and remove.
- Remove wood panel(s) that the mattress rests on.
- Using a saw, cut a hole approximately 1" high and 3" wide in the head of the pedestal base.

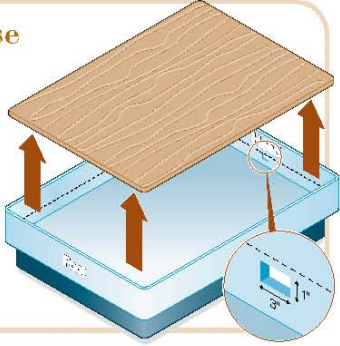

2 Position Firmness Control™ System


- Place the Firmness Control™ System on the floor inside the pedestal base.
- Feed the power cord and remote(s) through the hole cut in the head of the pedestal base.
- Place the Firmness Control™ System on the floor at the head of the bed and plug the power cord into an electrical outlet. (5000 Model: also plug the power cord into the Firmness Control™ System.)

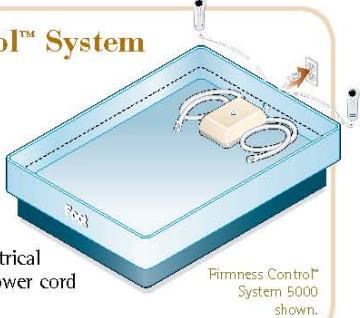

Firmness Control™ System 5000 shown.


3 Drill Hole(s) for Air Hose(s)

- Return the wood panel(s) to their original location.
- Temporarily lay your Air Chamber(s) on top of the wood panel(s) with the attached hose connector(s) facing the head of the bed.
- Drill the holes while using the hose connector(s) as a guide to help you determine the hole locations for the air hose(s). Holes should be approximately 1" in diameter.
- Feed the air hose(s) through the hole(s). (For the dual chamber beds, the hose marked with an "L" connects to the left Air Chamber and the other hose connects to the right Air Chamber.) See diagram in step 5 for left/right reference.

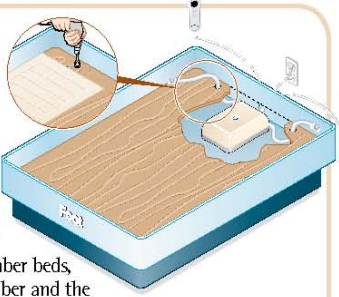

4 Install the Foam Riser Pads

- Place the 8 grey Foam Riser Pads flat side up in the mattress pedestal base.
- Pull the hose(s) up so that they lay on top of the Riser Pads.

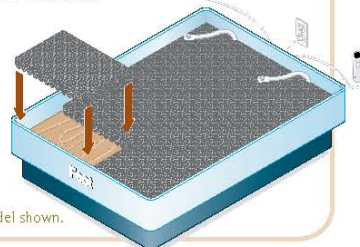

Queen/King model shown.

Before connecting the Firmness Control™ System to the air chambers (step #7 in the Assembly Instruction guide), connect the hose extension to the air chamber. The end with the short hose will attach to the air chamber and the other end will connect to the hose on the Firmness Control™ System.



112819