

Smart™ Skirt Bed Skirt

Installation on a Sleep Number 360™ smart bed with adjustable base

Thanks for purchasing the Smart™ Skirt. Follow these simple instructions to install your new bed skirt.



Unfold and lay the Smart™ Skirt around the foot of the bed (creating a U shape) with each end of the skirt at the head of the bed.

Raise the head and foot of your smart adjustable base.

If you have a FlexFit™ 1 adjustable base, raise the head of the base.



If you have a FlexFit™ 1 adjustable base, you will need to manually lift the foot of the deck. This step may require two people; one person to lift and hold up the deck and one person to thread the elastic strap under the base panel.

Starting at the foot of the bed, find the elastic strap located behind the center pleat. Hold the end of the strap with the button and thread it under the bed base panel. Reach over the top of the base panel with the other hand to bring the button forward over the top and button the ends together.



Adjust the skirt into position by tucking the 2.5" fabric border between the bed base and the adjustable base deck.

Adjust the elastic strap so the button is on the inside of the bed base, not on top of the edge. The seam of the bed skirt border should align with the edge of the base.

Repeat steps 2 and 3 at the left and right foot corners, and continue until all nine straps are in position. Attach the two straps at the head of the bed rather than the sides, for the best fit.



To complete installation, ensure that the border of the bed skirt is tucked between the bed base and adjustable deck all the way around and the top seam is flush with the adjustable deck.

Note: This bed skirt works best when the adjustable leg height is between 14.5" and 16".



sleep  number.

©2017 Sleep Number Corporation
Minneapolis, MN


Smart™ Skirt Bed Skirt

Installation on all other bed bases.

Thanks for purchasing the Smart™ Skirt. Follow these simple instructions to install your new bed skirt.



Unfold and lay the Smart™ Skirt around the foot of the bed (creating a U shape) with each end of the skirt at the head of the bed.

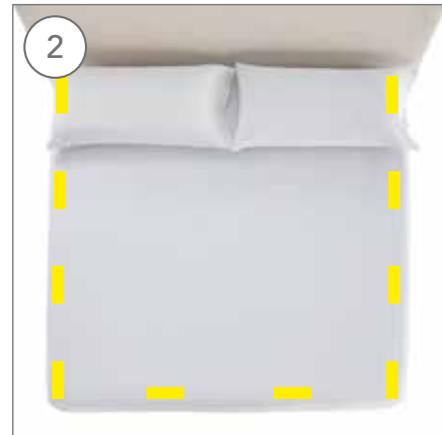

Enclosed with your Smart™ Skirt are ten 3-inch fastener strips of adhesive material. The fastener strips can be used to secure the Smart™ Skirt to your bed base or box spring. Simply place a strip in each corner and along the sides of the base or box spring, pressing firmly.

Fastener strips may be easily removed from fabric surfaces without damaging the surface or leaving behind residue.



Starting on one side of the head of the bed, tuck the 2.5" fabric border at the top of the skirt directly under the mattress, on top of the fastener strips.

The elastic bands will rest on the inside of the bed skirt; they are not needed for installation on a non-Sleep Number 360™ smart bed with adjustable base.



Continue tucking the border in all the way around the bed until the three sides are covered and the top seam is flush with the edge of the bed base or box spring.

